

SINGLE PHASE POWER DETAILS, CABLE, PLUGS AND SOCKETS.

SPACEWISE BUTCHER DOOR UNITS SERIES SPWU
100 REQUIRE SINGLE PHASE 240 VOLT 3 PIN
POWER SUPPLY.

The customers R.C.D. should be fitted with a 32 amp
motor rated breaker C or D type to prevent the
switch from tripping during machine start up along
with a 32amp BLUE commando socket.



The external socket should also be fitted with an isolator.

Spacewise provides an 18 metre extension lead with each
container. We can provide additional extension leads,
complete with plug and sockets. There is normally a charge
for this item

EXAMPLE OF CUSTOMER'S EXTERNAL ISOLATED POWER SOCKET.

POWER CABLE, PLUGS AND SOCKETS

**SPACEWISE BUTCHER DOOR UNITS REQUIRE 3
PHASE 440 VOLT 5 PIN POWER SUPPLY. 3X PHASE
1X EARTH CONNECTION 1X NEUTRAL
CONNECTION.**



The R.C.D. should be fitted with a 32 amp Type “C” or “D” motor rated breaker to prevent the switch from tripping during machine start up.

Spacewise will provide extension leads if required, complete with plug and sockets, however there is normally a charge for this item.

Spacewise commissioning / service engineers are equipped to test the supply and will advise if the socket needs replacement or a defect is found. Spacewise is unable to undertake replacement or repair to any stores power supply.